SCOSCHE

KA2092B

# IN-DASH DIN STEREO INSTALLATION KIT FOR 2006-UP KIA RIO/SORENTO (DOUBLE DIN)

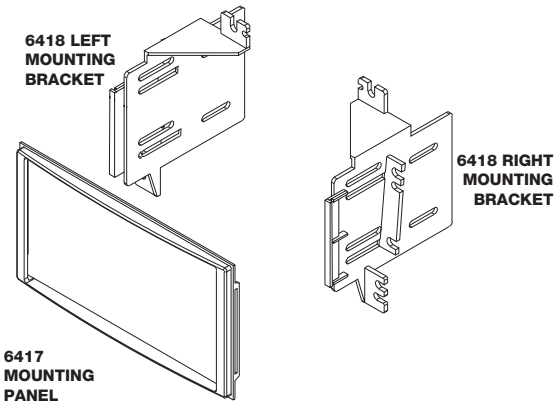


## INTRODUCTION/PRELIMINARY

This premium installation kit for 2006-UP KIA Rio/Sorento vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

**CAUTION**

**DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.**

**NOTES**

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

## FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

**CAR STEREO CONNECTORS**

**PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.**

**HY07B**
2007-UP Nissan Sentra

## LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (KA2092B) in 2006-UP KIA Rio/Sorento vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

©2007 SCOSCHE INDUSTRIES, INC.



## FACTORY STEREO REMOVAL

**2006-UP KIA Rio Radio removal:**

1. Using a panel removal tool, remove the dash bezel around the radio. Disconnect and remove panel.
2. Extract (4) Phillips head screws securing the radio to the dash. Disconnect and remove.

**2006-UP KIA Sorento Radio removal**

1. With PRT remove under vents on either side of A/C controls.
2. Remove (2) Phillips screws securing radio trim.
3. Unsnap radio trim and remove.
4. Remove (2) Phillips screws securing vents. Disconnect and remove.
6. Remove (4) Phillips screws securing radio to dash. Disconnect harnesses and remove.

## MOUNTING THE STEREO

**ATTACHING THE SINGLE DIN STEREO**

1. Align the (2) "L" wedges on to the mounting brackets with the location openings on the mounting panel and insert them into place.
   **Note:** Wedges are only pressure fitted.

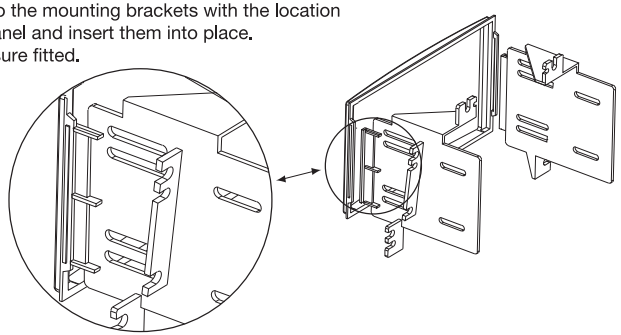

**ATTACHING THE DOUBLE DIN STEREO**

1. Align and position the aftermarket stereo with the left and right 6418 mounting brackets.
2. Use the screws supplied with the aftermarket double din stereo to secure the stereo to the mounting brackets.

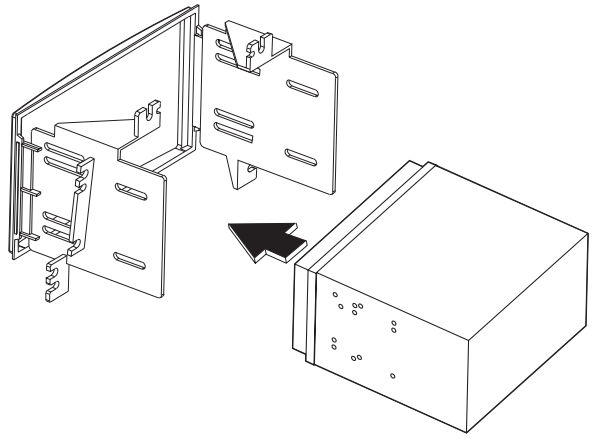

If you have any further questions, or need dash disassembly instructions, call our TOLL-FREE number:

**TECHNICAL HELP line 1-800-621-3695 x3**